



***DOMESTIC ROTARY LAWNMOWER***

 
***OWNER'S MANUAL***

## SAFETY INSTRUCTIONS

- Never mow while barefoot or wearing open sandals or thongs. Wear long trousers and heavy shoes
- Know your controls. Read the owner's manual carefully. Learn how to stop the engine quickly in any emergency
- Make sure the lawn is clear of sticks, stones, bones, wire and debris. They could be thrown by the blade
- Stop the engine and disconnect the spark plug wire before clearing blockages, checking, or working on the mower.
- Before using, always visually inspect to see that blades, blade bolts and cutter assembly are not worn or damaged. Replace worn or damaged blades in sets to preserve balance.

### **DAMAGED BLADES AND WORN BOLTS ARE MAJOR HAZARDS.**

- Check all nuts, bolts and screws often; always be sure the mower is in a safe operating condition. Use only genuine replacement parts.
- Refuel outdoors only. Do not smoke while fuelling engine. Add fuel before starting the engine.
- Never remove the cap off the fuel tank or add fuel while the engine is running or the engine is hot. If fuel is spilled, do not attempt to start the engine but move the machine away from the area of the spill and avoid creating any source of ignition until fuel vapours have dissipated.
- Do not mow whilst people, especially children or pets are in the mowing area.
- Replace worn or faulty silencers (muffler)
- Mow only in good daylight.
- Never use the mower unless the grass catcher or guards (rear flap) provided by the manufacturer are in position.
- Start the engine carefully with feet well away from the blade.
- Do not operate the engine in a confined space where exhaust fumes (carbon monoxide) can collect.
- Stop the engine whenever you leave the mower, even for a moment.
- Do not allow children or people unfamiliar with these instructions to use the mower.
- Store the mower in a well-ventilated room away from naked flames such as may be found in hot water heaters.
- Do not over-speed the engine or alter governor settings. Excessive speed is dangerous and shortens the mower life.
- It is advisable to wear suitable eye protection when operating a mower.
- Turn the fuel off at the conclusion of mowing and reduce the throttle setting during engine run-out.
- Store fuel in a cool place in a container specifically designed for the purpose. In general, plastic containers are unsuitable.
- Stop the engine, disconnect the spark plug wire and inspect the mower if :
  - the mower begins to vibrate abnormally; or
  - after striking a foreign object.
- Never cut grass while walking backwards.
- Stop the engine before pushing the mower across gravel drives, walks or roads.
- Walk, never run.
- Mow across the face of slopes, never up and down. Exercise extreme caution when changing direction on slopes. Do not mow excessively steep slopes.
- Never pick up or carry a mower when it is operating.





## INTRODUCTION

***Congratulations on your purchase of this domestic rotary lawnmower.***

This manual covers the setting up, operation and maintenance of the domestic rotary lawnmower. Please read and understand this owner's manual before using the mower.

If any point is unclear, contact ***Rover Mowers*** or any ***Rover Mowers*** authorized service dealer or agent.

**To emphasise special information the following WARNING and CAUTION highlights are used.**

	<b>WARNING</b>		<b>CAUTION</b>
	The safety of the user and others involved. Personal injury may result should this information be disregarded.		Follow these instructions to avoid mower damage and possible loss of warranty.

### MANUAL CONTENTS

	Page
• Safety instructions	1
• Introduction	2
• Setting up	3
• Operation - All Models Mulch Models (only)	3, 4 & 5 4 & 5
• Maintenance - All Models Mulch Models (only)	6, 7 & 8 6, 7 & 8
• Mulch Mowing Information	8 & 9
• Warranty conditions	10

### CARTON CONTENTS:

	Quantity
• Domestic rotary lawnmower	1
• Plastic kit bag (containing Owner's manuals and handle bar fasteners)	1
• Plastic grass catcher upper half	1
• Plastic grass catcher lower half	1

NB. Mowers which have the Mulch option will have the mulch plug fitted into the rear chute of the mower.

**If when unpacking your new lawnmower it is found that there are items missing contact your nearest authorized Rover Mowers service dealer or agent.**

## SETTING UP

### Plastic grass catcher assembly

- Refer to the “Set Up Instructions” attached to the grass catcher lower half.

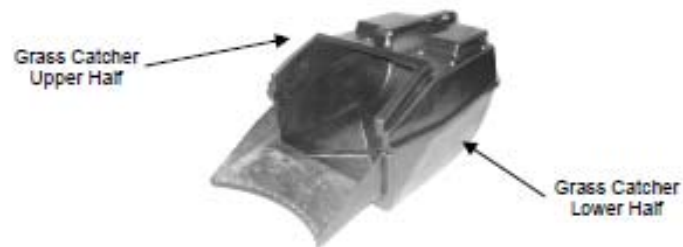


Figure 1. Grass Catcher—Assembled

### Engine oil

***Oil must be added before attempting to start the engine otherwise damage to the engine will occur.***

Refer to the engine owner’s manual.

The 4 stroke engine fitted to the lawnmower ***is shipped with no oil*** in the sump.


### Engine fuel

Refer to the engine owner’s manual.

Use only fresh unleaded fuel in the lawnmower engine.

## OPERATION - All mowers

**Adjusting the cut height**– refer figure 2.

	<b>WARNING</b>
	When selecting the cut height stand to the rear of the machine with your feet well clear of the cutting blades.

The lawnmower 13 height settings are controlled by the height adjustment lever located at the rear right hand wheel.

- Grasp the height adjustment lever (1) and pull the lever away from the base to disengage the lever from the height adjustment rack (2).
- Move the lever either forwards or backwards to the desired position and release the lever so as to engage in the height adjustment rack.

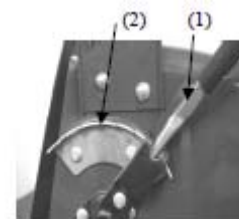



Figure 2. Height adjustment

## Installing the grass catcher– refer figures 3 and 4.

	<b>WARNING</b>
	The grass catcher should only be fitted or removed when the engine is stopped. Never raise the rear flap when the engine is running.

- Raise the rear flap of the mower.
- Grasp the grass catcher by the top handle and position the grass catcher against the rear of the mower. Refer to Figure 3.
- Lower the rear flap so that the back edge of the rear flap hooks over the matching lip on the grass catcher. Refer to Figure 4.

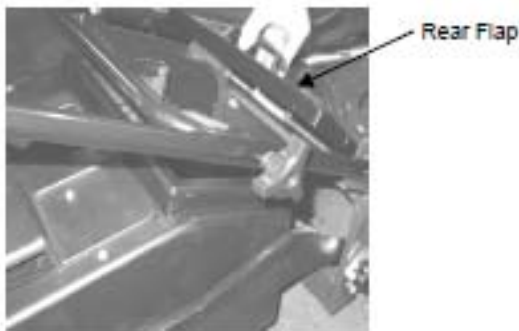


Figure 3. Grass catcher fitment



Figure 4. Grass catcher fitted

## Removing the grass catcher

- Raise the rear flap of the mower to release the grass catcher.
- Lift the grass catcher clear of the mower and lower the rear flap.


## Emptying the grass catcher - refer figure 5.

- Remove the grass catcher (as per the instructions above).
- Tilt the grass catcher with the opening downwards.
- Grip the catcher handle of the grass catcher and shake the clippings out. Refer to figure 5.



Figure 5. Emptying grass catcher

## OPERATION - Mulch Mowers (only) Installing the Mulch Plug

	<b>WARNING</b>
	The mulch plug should only be fitted or removed when the engine is stopped. Never raise the rear flap when the engine is running.

## OPERATION - Mulch Mowers (only)

### Installing the Mulch Plug (Continued)

- With the engine stopped, raise the rear flap of the mower and remove the grass catcher (if fitted)
- Insert the long right hand side of the mulch plug first into the rear chute of the mower. Refer to figure 6.
- Rotate the left hand side into the rear chute of the mower and push it as far forward as possible.
- Align the lugs (1) (on the underside of the mulch plug) either side of the rear chute (2) then lower the mulch plug until it sits down flat onto the top of the rear chute in the mower base. Refer to figure 7.
- Lower the rear flap.



Figure 6. Mulch plug Installation (A)

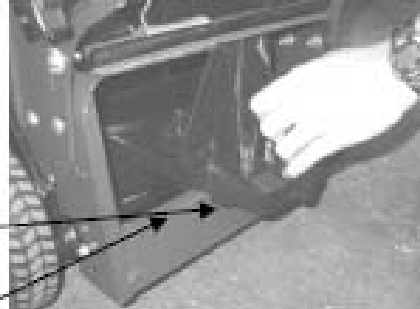


Figure 7. Mulch plug Installation (B)

### Removing the Mulch Plug

- With the engine stopped, raise the rear flap of the mower.
- Grasp the rear of the mulch plug and lift up and away from the mower. Refer to figure 7.
- Guide the mulch plug out by rotating the shorter left hand side to the right and then guiding the longer right hand section until clear of the mower. Refer to figure 6.

## OPERATION - All mowers

### To Start the engine

Refer to the engine owner's manual for detailed starting procedure.

Ensure that the engine oil is at the correct level and that the fuel tank is full of fresh unleaded fuel.

- Move the throttle control lever to the :- "START" position (where fitted) - or the "RUN" position and prime the engine. Refer to the engine manual.
- Grasp rope handle and pull slowly until resistance is felt. Then pull the cord rapidly to overcome compression, prevent kickback and start engine. Repeat if necessary.
- If a "START" is fitted move the throttle control lever to the "RUN" position after the engine starts.



Figure 8. Throttle Control - ("START" / Run Position)

To stop




Figure 9. Throttle Control - ("STOP" Position)

## MAINTENANCE - All mowers

### To Stop the engine

Move the throttle control lever to the "STOP" position. Refer figure 9.

Wait till the engine comes to a complete stop before removing or fitting the grass catcher or mulch plug to the mower, or attempting any maintenance work on the mower.

	<b>WARNING</b>
	Before carrying out any maintenance on the mower remove the spark plug lead from the spark plug to prevent accidental starting.

### Engine air cleaner

Refer to the engine owner's manual for detailed maintenance instructions.

The engine air cleaner elements must be serviced after every 25 hours of normal mowing. The elements must be serviced more regularly if the mower is used in dusty conditions. Replace immediately if the element is damaged.

### Spark plug

Refer to the engine owner's manual for detailed maintenance instructions.

For best results, remove the spark plug every 50 hours for gap checking and replace every 100 hours of use. Replace the spark plug at any time if it is found that the electrodes are pitted or burned or the porcelain cracked. For replacement refer to engine owner's manual for correct spark plug.


### Muffler

Check the condition of the muffler periodically for rust and cracks. Replace if found to be damaged as this can lead to increased exhaust noise. Replace only with a genuine original equipment part.

### Blades - refer figure 10.

Check the condition of the blades and central fasteners at regular intervals, or after striking a solid object, or if the mower begins to vibrate abnormally. The blades with use, will lose their sharp edge and the quality of the grass finish will deteriorate.

When this happens, all the blades should be removed and replaced with a new set of blades. Always use genuine **Rover** replacement blades and only replace blades in sets to maintain balance.


	<b>WARNING</b>
	Always ensure the engine is stopped and the spark plug lead is removed before attempting any maintenance on the mower. Secure the mower safely when tilted upwards to access the underside.

### Cutting Assembly

- With the engine stopped, remove the spark plug lead and grass catcher or mulch plug.
- Set the height of cut lever to the high cut position, and fold the handle bars.
- Tilt the mower so the spark plug is up.
- Inspect the cutting assembly for damage and wear.
- Check the disc retaining bolts. Tighten the centre bolt to 57-62Nm.
- Return the mower to its normal position and re-attach the spark plug lead.

## MAINTENANCE - All mowers

### Blade Change- refer figures 10 and 11.

	<p style="text-align: center;"><b>WARNING</b></p> <p>Always ensure the engine is stopped and the spark plug lead is removed before attempting any maintenance on the mower. Always replace blades and blade fixings in complete sets to maintain balance.</p>
---	---

- With the engine stopped, spark plug lead and grass catcher or mulch plug removed, open the discharge flap and prop in the open position. Refer to figure 10.
- Set the mower to the high cut position and fold the handle bar down.
- Rotate the cutting assembly carefully to access the blade retaining bolts. Refer to figure 10.
- Using gloves and a suitable spanner, remove the blade assembly.
- Retain the “D” plates and discard the blades and fasteners.  
NB. Mowers fitted with a circular cutting disc must be fitted with a “D” Plate (as shown in figure 11). These parts are available from any **Rover Mowers** authorized service dealer or agent.
- Fit new blades and fasten in the correct order. Refer to figure 11.
- Tighten the blade retaining nuts firmly to 16Nm.
- Remove the flap prop, close the discharge flap and reattach the spark plug lead.

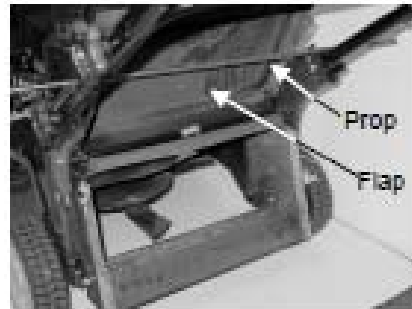


Figure 10. Blade change

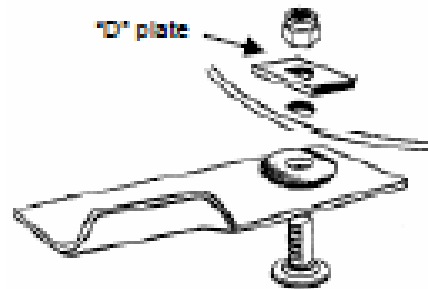


Figure 11. Blade Attachments

### Cleaning


To ensure safe operation and long life it is recommended to clean the mower after every use. This will prevent corrosion, overheating and fire risk while ensuring ultimate performance.

### Washport (where fitted)

- Place the mower outdoors on a flat surface.
- Set the height to maximum.
- With the engine stopped connect a garden hose with a snap on connection, to the washport fitted to the inside face of the cutting chamber. Refer figure 12.
- Turn the garden hose on.
- Return to the mower and start the engine and run at full speed for 1 minute.
- Stop the engine and turn off the garden hose.
- Remove the garden hose from the washport.
- Inspect the underside of the mower, if not completely clean use garden hose to flush out remaining debris.




## Cleaning the Underside of the Mower

	<b>CAUTION</b>
	Always ensure the engine is stopped and the spark plug lead is removed before attempting any maintenance on the mower.

- Place the mower outdoors on a flat surface.
- Set the cut height to maximum.
- With the engine stopped, remove the grass catcher or mulch plug and lift open the discharge flap.
- Use a garden hose to wash out all the grass clippings.
- Inspect the underside and repeat the cycle if still not clean.

## Cleaning the Upper side of the Mower

	<b>CAUTION</b>
	Do not hose the engine as water can damage the air cleaner and ignition system.

- Use a dry cloth or soft brush to remove all loose clippings.
- Use a damp cloth with mild detergent to clean away oil or other grime.
- Wash the grass catcher and/or mulch plug separately from the mower with a hose. Wash all clippings out of the inside, outside and from the grass catcher mesh.
- Let the mower dry before storing.

## MAINTENANCE - Mulch mowers (only)

### Mulching Equipment

For optimum mulching performance

- The mulch blades are to be kept sharp.
- Maintain the blade sharpening angle when sharpening.
- Keep the cutting edge feather free when sharpening.
- Keep the underside of the mower deck and the mulch plug free of build-up.
- Refer to the "Cleaning" section on page 7 and 8.

### MULCH MOWING INFORMATION

Some mowers are fitted with an option for mulch mowing.

A mulch plug is supplied with these mowers and it is installed in the rear discharge chute (as noted in the "OPERATION" section of this manual) to perform mulch mowing.

The following information provides advice on mulch mowing.

### MULCH MOWING

The mulch mowing setup reduces the grass clippings into very fine particles.

The design allows for the even distribution of the grass particles at the base of the lawn.

The mulched clippings can then:

- Break down quickly, releasing nutrients into the soil, saving on fertilizer costs.
- Reduce evaporation of moisture from the soil which reduces watering costs and effort.
- Help to control temperature extremes protecting the roots of the grass.
- Assist in controlling soil erosion.

## MULCH MOWING INFORMATION (continued)

### BENEFITS TO YOUR LAWN

Research has shown that lawns are usually cut *too short*. Grass, like any other plant life, relies on photosynthesis to regenerate and survive. Reduced leaf size (from cutting too low) can seriously effect a lawn by:

- Making it easy prey for disease.
- Encouraging weeds to take hold.
- Exposing the soil to:
  - greater evaporation
  - temperature extremes; and
  - erosion

Raising the cut height and using mulch mowing follows the *best practice* for nurturing a healthier more attractive lawn with less water usage.

### BENEFITS FOR YOU

Because you mulch as you mow the time and cost savings are also significant:

- Eliminating raking of leaves before mowing (Mulch mowing picks up and converts fallen leaves into mulch).
- Eliminating raking of cut grass
- Saves time spent emptying the catcher.
- Automatically disposing of grass clippings.
- Eliminating the need to dispose of clippings at the refuse tip.

### USEFUL MULCH MOWING TIPS

Mulch mowing is an art form and to produce the best results consistently, follow these useful hints:

- **Do not attempt to mulch if the grass is too wet.**  
Wet grass tends to clump together and does not evenly spread out. It also clogs up the underside of the base.
- **Do not mulch mow on too low a cutting height.**  
Remember the maximum cut should be 25mm off the top of the grass, or 1/3<sup>rd</sup> the grass (blade) height, whichever is the lesser amount . Refer to figure 13.
- **Do not push the mower too fast.**  
To obtain the best finish it may be necessary to regulate the ground speed.
- **Run the engine at full throttle.**  
Running the engine at low speed does not allow the blades to mulch the grass efficiently.
- **Keep the mulch blades sharp.**  
The mulch blades are designed to cut and recut the blades of grass. If the mulch blades are not kept sharp, mulching performance will be reduced.
- **Keep the underside of the mower and mulch plug clean.**  
Build-up of grass under the mower base blocks the airflow created by the mulch blade and reduces the mulching performance.

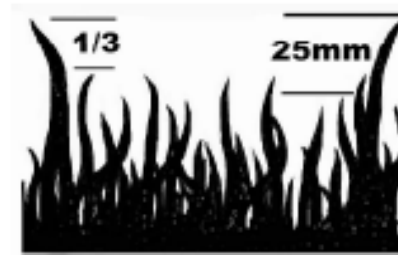


Figure 13. Grass height

**If the conditions for mulch mowing are not ideal and some clipping trails are visible after cutting it may be necessary to:**

1. Fit the grass catcher and catch mow.
2. Re-mow over the visible clippings
3. Raise the cut height.
4. Rake the clippings up after mowing.

## Warranty Conditions Australia & New Zealand Only

Rover Mowers Limited warrant that this machine is free from defects in material and workmanship. This warranty is limited to making good or replacing any part which appears upon inspection by the manufacturer or his agent to be defective in material or workmanship.

The warranty for the engine used to power this machine may differ from the warranty for the other components. Refer to the engine warranty statement in the Engine Owner's Manual which has been included with this machine. As the warranty may differ, you are advised to read the engine warranty carefully.

For other items this warranty shall apply for a period of 12 months from date of purchase for domestic use only. However these items are **not** warranted for commercial or industrial use.

This warranty does not obligate the manufacturer, his agents or dealers to bear the transport costs incurred in the repair or replacement of any defective part. This warranty excludes fair wear and tear, or any damage caused by misuse or abuse. Parts such as blades, blade bolts, V-belts, and spark plugs, which can be subjected to use beyond their normal intended working capacity are also excluded.

This warranty is void if parts other than genuine have been used or if repairs or alterations have been made without the manufacturer's written authority. The above warranty does not exclude any condition or warranty implied by the Trade Practices Act 1974 or any other relevant legislation which implies any condition which cannot be excluded.

**REMEMBER:  
PROOF OF PURCHASE IS THE RESPONSIBILITY OF THE OWNER AND IS  
RECOMMENDED PRIOR TO WARRANTY WORK BEING UNDERTAKEN. REPAIRS  
MUST BE CARRIED OUT BY AN AUTHORISED DEALER OR AGENT AND GENUINE  
SPARE PARTS MUST BE USED OR YOUR WARRANTY WILL BE VOID.**

Rover Mowers Limited reserves the right to make changes and add improvements to its product at any time without notice or obligation. The Company also reserves the right to discontinue manufacture of any product at its discretion at any time.

**Online warranty registration:  
[www.rovermowers.com.au](http://www.rovermowers.com.au)**

**For your Record:**

Retailers Name: ..... Address: .....

Phone No: ..... Model No: .....

Serial No: ..... Date of Purchase: .....



A.B.N. 11 000 257 303

A.B.N. 11 000 257 303

Rover Mowers Limited, PO. Box 1235, Eagle Farm. Qld. Australia. 4009

Phone: 07 3213 0233

04016593  
Revision A

© Copyright  
2008