


High Definition
**PVR READY
SET TOP BOX**
HVBTR-1200

USER MANUAL

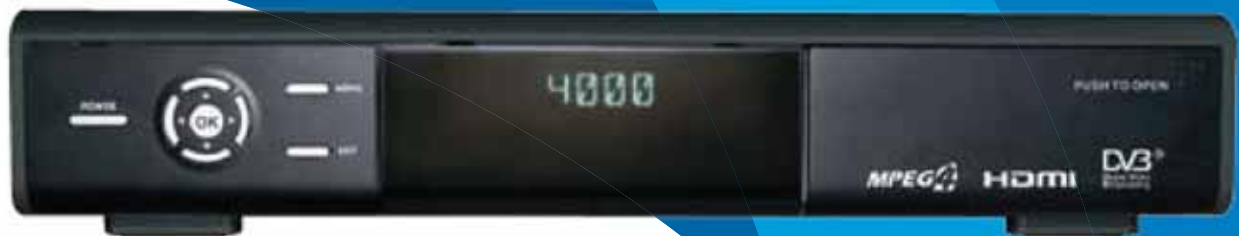

Contents

GENERAL INFORMATION

P1

Main Features	P1
For Your Safety	P2
Unpacking(optional)	P3
General Operation	P3
RCU	P4

INSTALLATION

P5

WELCOME PAGE

P7

MAIN MENU

P8

1. Edit Channel	P8
2. Installation	P10
3. System Setup	P11
4. Tools	P13
5. Game	P16
6. REC(PVR Ready)	P17
7. Hot key	P19

SPECIFICATION

P22

TROUBLE SHOOTING

P23

GENERAL INFORMATION


This Set Top Box (STB) will take you to the new and exciting world of television. A world of crystal clear widescreen pictures, digital sound, more information services. To make full use of your STB, please take the time to familiarize yourself extensive features of the unit detailed in this User Manual.

Main Features

- SD MPEG-2/HD H.264 & fully DVB-T compliant
- Automatic PAL/NTSC conversion
- 1000 channels TV and Radio programmable
- 8 different favorite groups selection
- Fully support to 7 days Electronic Program Guide(EPG)
- 256 colors On Screen Display
- Channel search in automatic, manual search
- Various channel editing functions(favorite, move, lock, rename and sort)
- Parental control for channels
- Ease to use Menu System
- Time set by GMT offset automatic and manual, Summer Time support
- Automatic turn on\ off by Timer setting(multiple options)
- Automatic save for last channel
- Support Logic Channel Number(LCN)
- Games: Teris, Othello, Sudoku
- Support FAT32, NTFS (Option)
- MP3/ JPEG/ BMP/ OGG files
- Record Live TV with Subtitle (you can choose to display or close subtitle during playback)
- Lock/Delete/Rename, Preview playback, Browse record files information
- Play/Pause/Stop/Step
- Fast Forward/Fast Backward 2/4/8/16/24,
- Slow Forward/Slow Backward 1/2, 1/4, 1/8

GENERAL INFORMATION


For Your Safety

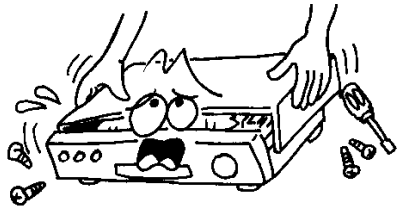


- To avoid electric-shock hazards, do not open the cabinet, refer servicing to qualified personnel only.




- Keep the receiver away from flower vases, tubs, sinks, etc., in order to avoid damaging the equipment.

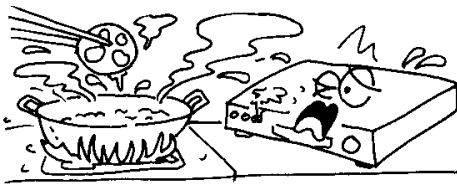


- Do not expose the receiver under the sunlight. And keep it away from the heat source.

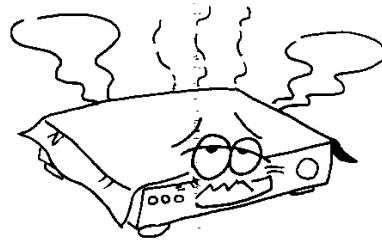


- Do not block ventilation holes of the Receiver so that air can circulate freely.

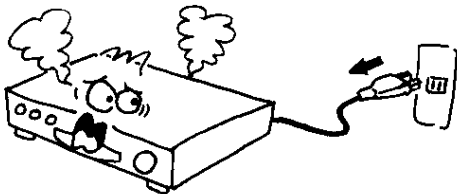


- When the abnormal phenomenon occur, you should cut off the power immediately.

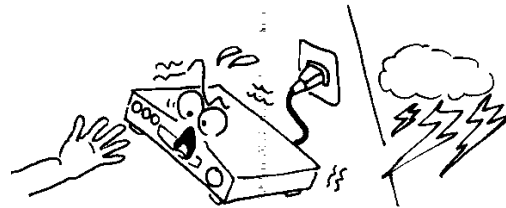

- Do not touch the receiver during thunder, since that might create electric-shock hazards.

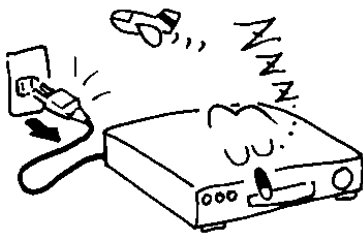

- Switch the receiver off whenever it remains out of service for an extended period.

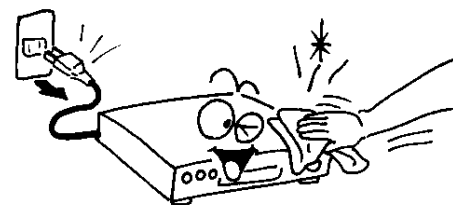

- Be sure to turn the Receiver off and disconnect the AC power cord before cleaning the Receiver surface. If the surface is dirty, wipe clean with a cloth which has been dipped in a weak soap-and-water solution and wrung out thoroughly, and then wipe again with a dry cloth.

GENERAL INFORMATION

Unpacking(optional)




● Remote Control



● Batteries



● User Manual

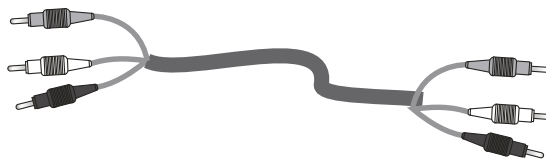

● AV cable

General Operation

- Throughout this manual you will notice that the everyday operation of the receiver is based on a series of user friendly on screen display and menus. These menus will help you get the most from your receiver, guiding you through installation, channel organizing, viewing and many other functions.
- All functions can be carried out using the buttons on the RCU, and some of the functions can also be carried out using the buttons on the front panel.
- The receiver is easy to use, always at your command and adaptable for future advances.
- Please be aware that new software may change the functionality of the receiver.
- Should you experience any difficulties with the operation of your receiver, please consult the relevant section of this manual, including the Problem Shooting, or alternatively call your dealer or a customer service adviser.

GENERAL INFORMATION

RCU



Key	Function
	Standby
	When watching a channel, mute the sound
0~9	Enter number of the required menu item or select a channel number to watch
TV/RADIO	Switches between TV and Radio mode
← PR	Switches back to previous channel
FAV	Displays the favorite group list
SHIFT	Time shift function (External Drive is required)
REC LIST*	Enter Record Manager to view current recorded list
INFO	Show information of the current channel
MENU	Press this key one time to run menu onscreen
PAGE+, PAGE-	Moves up / down a page in the list
OK, LIST	Executes the selected item in the menu screen or enters the desired value in any input mode
PR+, PR-	When watching a channel, change channels or move to the next higher or lower item in the menu
	When watching a channel, adjust the volume or move to the left or right item in the menu
EXIT	Return to the previous menu on the menu screen or escape from the menu
EPG	Call up the EPG (Electronic Program Guide)
	Display the Audio window.
TXT	Switch to teletext mode (subject to teletext broadcasting)
TV/AV	Switch between TV and AV modes (not available in this model)
SLEEP	Enter into the sleep in mode
PAUSE	Press once to pause the screen picture, press once again to go to the normal mode when without external device
RECORD	Record the program when with external device
,	Play and stop the program when with external device
	Press to fast forward or fast backward
	Press to slow forward or slow backward
F1	Shortcut to Media Player Function
F2	Shortcut to TV System Setting
V-Format	Press this key to change display resolution

* FIND on earlier model RCU


INSTALLATION

Front Panel




Push as indicated to open the USB Compartment door

Rear Panel

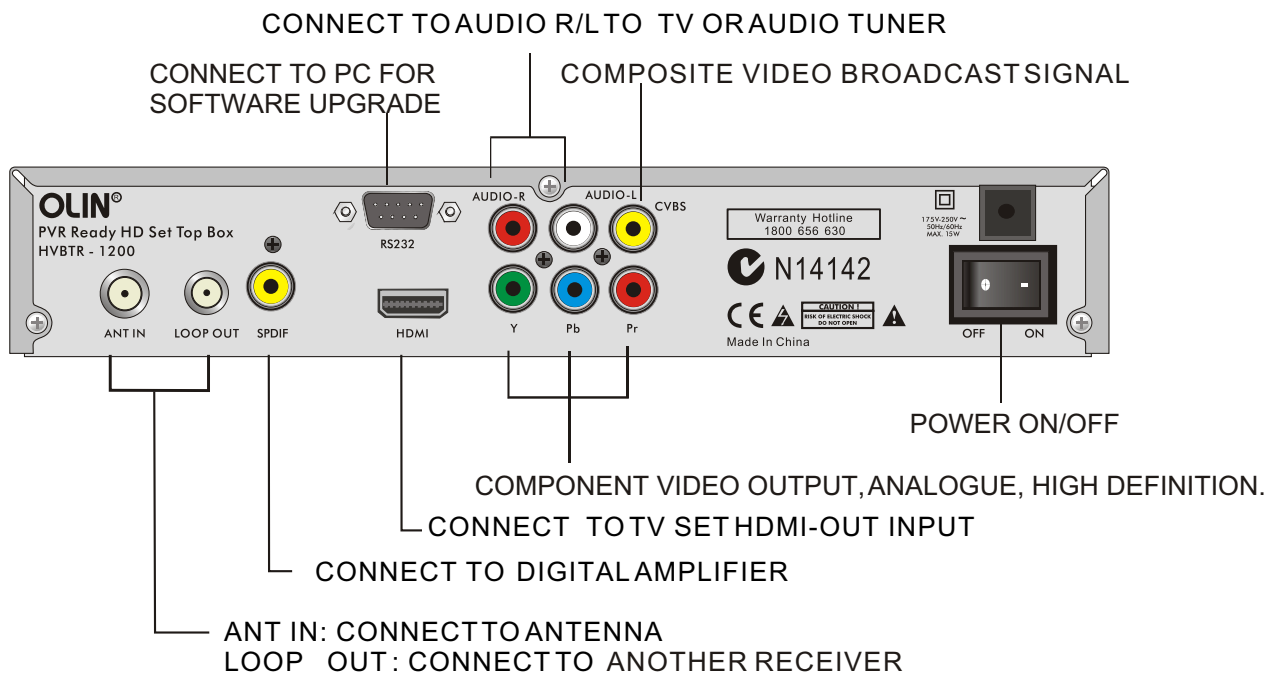

Connecting to TV using RCA support

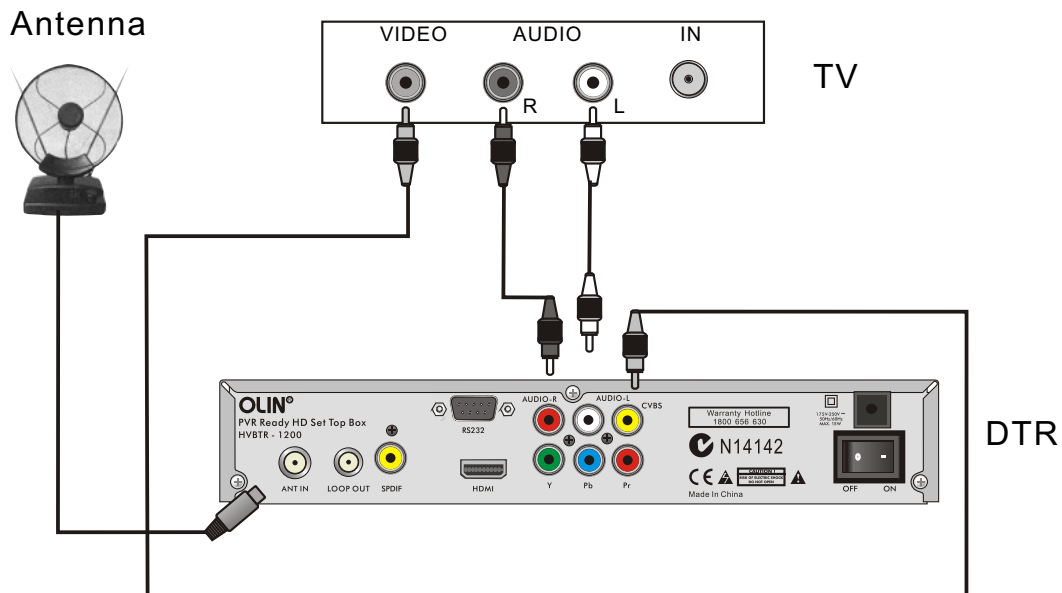


5

● The picture is for reference only, actual product may vary.

INSTALLATION

Connecting a Digital Audio Decoder/Amplifier

Antenna

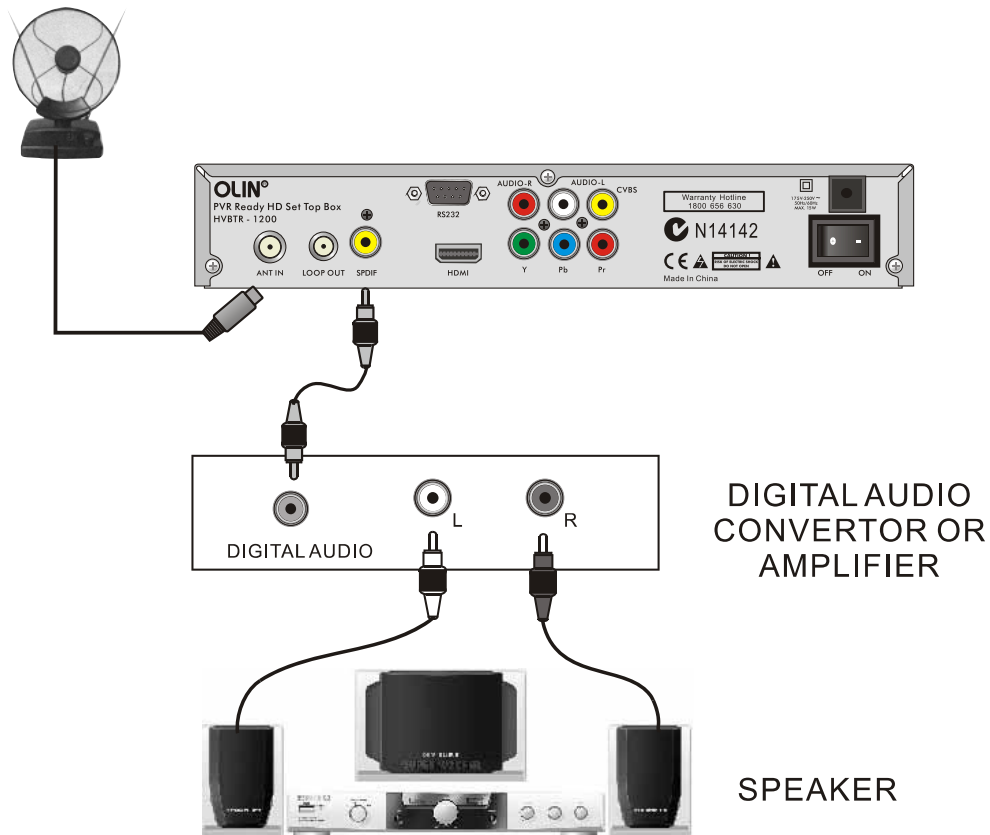

WELCOME PAGE

- When power on first time, it will show welcome page like below.

- Press **PR+,PR-** keys to move highlight to select **Region, Display Mode, Aspect Mode** and **language**.

Press \triangleleft \triangleleft^+ keys to change Region, Language and Aspect Mode. Press OK when highlight Display Mode and select from pop-up window.



- Move highlight to [OK] option and press OK key to enter Auto Scan menu.



- Press [EXIT] key to exit this menu.

MAIN MENU

- When you press [MENU] key, you can enter **Main Menu**.

This menu consists of 6 major sub-menus as below.

- **Edit Channel**
- **Installation**
- **System Setup**
- **Tools**
- **Game**
- **REC**



1. Edit Channel

- Move highlight on Edit Channel item and press [OK] key to enter Edit Channel menu as besides.

This menu has 3 sub-menus such as: **TV Channel list**, **Radio Channel List** and **Delete All**.

1.1 TV Channel List

1. Press **PR+**, **PR-** keys to select the program that you want to play, and then press **OK** key to preview it in the small window. If move the **yellow** cursor to select up or down, you will see a gray line which indicates the playing program in the small window.



2. Press **FAV** key to move the FAV button upward. Select the program and press **OK** key to pop up the favourite group list. In the list, select the group that you want to add into and press **OK** key, and then you will find the favourite mark is displayed at the right side of the selected program.

Press **EXIT** key to exit from the fav mode, and then press **FAV** key you will find the FAV button return to the origin position.



3. Press **red** colour key to move the Lock button upward. Select the program and press **OK** key to mark this program with the Lock mark. You can cancel this mark by pressing **OK** key once more.

Press **red** colour key again to exit from the lock mode, and you will find the Lock button return to the origin position.



MAIN MENU

4. Press **green** colour key to move the Skip button upward. Select the program and press **OK** key to mark this program with the skip mark. You can cancel this mark by pressing **OK** key once more.

Press **green** colour key again to exit from the skip mode, and you will find the Skip button return to the origin position.



5. Press **yellow** colour key to move the Move button upward. Select the program and press **OK** key to mark this program with the move mark. Press **PR+, PR-** keys to move the cursor to the position where you want to locate and press **OK** key to confirm.

Press **yellow** colour key again to exit from the yellow mode, and you will find the yellow button return to the origin position.



6. Press **blue** colour key to enter into the **Edit channel** window.

i. Sort (red colour key)

Press **red** colour key to pop up the Sort drop-down list.


Name(A-Z): The ascending order, omitting the \$ character, the number is ahead, then the capital letter, at last the lowercase.

Name (Z-A): The opposite order of the above Name (A-Z).

Free/Scramble:: All FTA programs are listed ahead, while all scrambled programs are listed last.

Lock: all locked programs are listed at the bottom.

Default

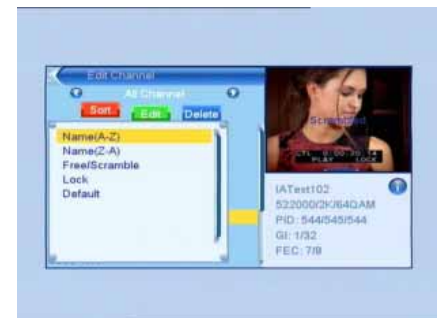

ii. Edit (green colour key)

Press green colour key to move the Edit button upward. Select the program and press **OK** key to pop up the Rename window.

In Rename window, press yellow key to switch between capital letter and lower-case letter; press red key to delete last character, press direction keys to move the cursor, press **OK** key to select and press blue key to save and exit.



MAIN MENU

iii. Delete (blue colour key)

In **Delete** window, press **blue** colour key to move the Delete button upward. Select the program and press **OK** key to mark this program with the deletion mark. You can cancel this mark by pressing **OK** key again.

Press **EXIT** key two times to pop up the dialogue "Are you sure to save?". Select Yes button and press **OK** key to save, or select NO button and press **OK** key to exit without saving.




1.2 Radio Channel List

The same operation as **1.1 TV Channel List**, here we don't explain any more.


1.3 Delete All

Move cursor to the Delete All item, and press OK Key to pop up the dialogue "Warning! Do you really want to delete all channel?".

Select Yes to delete all; select No for quit.

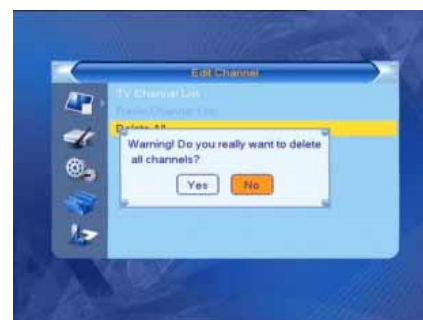

2. Installation

1. Press **PR+**, **PR-** keys to move the cursor up or down.
2. Press **EXIT** key or  key to return to upper level menu on the left side.



2.1 Auto Scan

When you enter Auto Scan menu, the screen will display as below.

In FTA Only, press [Left/Right] key to choose Yes or No.

Move the highlight on the search option, and press [OK] key to start scanning.

Press [EXIT] key to exit this menu.



2.2 Channel Scan

When you enter **Channel Scan**, the screen will display as beside.

There are two scan modes for you. You can choose to scan by channel or by frequency.

Move highlight to **search** option, and press [OK] key to start scanning.

Press [EXIT] key to exit the scanning and save the current selection.



2.3 Aerial Adjustment

When you enter Antenna feeding, the screen will display as beside.

For CH No. option, press [Left/Right] key to choose the channel.

For Tuner Power option, press [Left/Right] key to choose Off and On.



2.4 LCN (Logic Channel Number)

Press [Left/Right] key to choose On and Off.

3. System Setup

When you enter the System Setup menu, you will see the screen like besides.

It contains 7 sub-menus such as: Language, TV System, Local Timer Setting, Timer Setting, Parental Lock, OSD Setting and Favorite .

Press [OK] key to enter the selected item.



3.1 Language

1. Press **OK** key to enter into the **Language** window.
2. Press **MENU** key or **EXIT** key to save and exit.



3.2 TV System

Press PR+, PR- key to move the cursor up or down, while press \triangle ∇ keys to change the setting and the setting will take effect immediately.

1. Video Resolution: Select between 480i /480p/576i/576P/720P/1080i.

2. Aspect Mode: Select among 4:3LB, 4:3PS, 16:9 and Auto.

3. Digital Audio Output: Select between LPCM Out and BS Out.

4. Auto Standby: Select ON for auto standby if no operation within 3 hours.



3.3 Local Time Setting


1. Region: Select the region.

2. GMT Usage: if OFF is selected, the GMT Offset and Summer Time options will be disabled and greyed out, You can set the Date and Time options manually at the bottom. If ON is selected, Date and Time options will be disabled and greyed out. You can change the GMT Offset and Summer Time options and the time information will be updated automatically from the TV signal.

3. GMT Offset: Select the time zone.

4. Summer Time: Set the daylight saving option.

5. Date, Time: Set date and time manually.

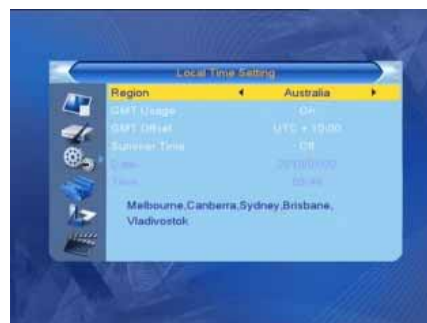

3.4 Timer Setting

If there is no program, you can not enter into this window. There are 8 timers that can be set. Select Timer up or down, and press OK key to enter into the setting window.

1. Timer mode: The default mode is off. You can set the timer once, daily and Off.


2. Timer Service: Select Timer type: Channel for just wake up at the scheduled time and Record for wake up and record the program at the scheduled time.

3. Wakeup Channel: Select the channel.

4. Wakeup Date, Time: Use numeric keys to input the valid date.

5. Duration: Set the length of the time before power off. If Timer Service is set as Record, unit will stop recording before power off.

Use PR-/++ to highlight Save and press OK to save the timer setting.

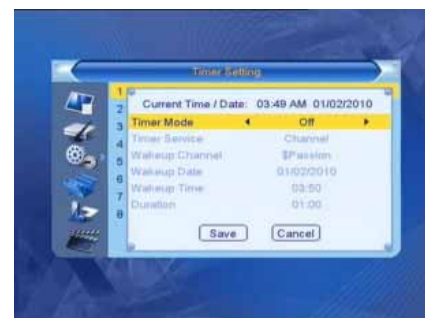

3.5 Parental Lock

Before entering into the Parental Lock window, you need input the correct password. The default password is 0000.

1. Menu Lock: Press \triangleleft \triangleleft^+ keys to select between Off and On. If ON is selected, password will be required to access sub-menus.

2. Channel Lock: Press \triangleleft \triangleleft^+ keys to select between Off, AGE10, AGE12, AGE 16 and AGE 18. The default value is Off.

If select "On", you can not view the locked channel set in Chanel List Edit window until you input the correct password.

3. New Password: Use numeric key (0-9) to input the new password.

4. Confirm Password: Input the new password once again. Confirm password must be the same as the New password. System will inform you "Change password successfully!" while they are the same, or inform you to input the password of Confirm password once again when they are not the same.



3.6 OSD Setting

1. OSD Timeout: Press \triangleleft \triangleleft^+ keys to select from 1 to 10 by step 1. The default value is 5.

2. OSD Transparency: Press \triangleleft \triangleleft^+ keys to select among Off, 10%, 20%, 30%, 40%. The default option is Off.

Press MENU or EXIT key to save and exit.

3. Load Default OSD setting: Default OSD timeout and transparency.



3.7 Favorite

There are 8 favorites group listed in this window. Press **PR+**, **PR-** keys to select one and press **OK** key to the **Rename** window, here we don't explain any more.



4. Tools

1. Press **PR+**, **PR-** keys to move the cursor up or down.

2. Press **EXIT** key or \triangleleft key to move the focus to the left menu.



4.1 Information

When you enter Information menu, you should see the screen like it displays on the right.

This screen displays receiver information.

You should press [EXIT] key to cancel this menu.



4.2 Load Factory Setting

Highlight Load Factory Setting and press OK. A warning message (Right) will appear on the screen. Select Yes to restore to factory default settings and all changes will be lost.

Note: Please use with caution




Note: Please use this function carefully.

4.3 Upgrade By RS-232

This feature is built-in only for distributor's customer support team in the event of restoring the system or repairing. User is not recommended to perform the firmware upgrading by oneself.


Attempt of doing so may result in unit malfunction.

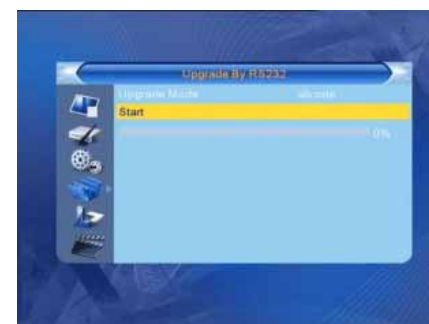

4.4 Upgrade by USB

This feature is built-in only for distributor's customer support team in the event of restoring the system or repairing. User is not recommended to perform the firmware upgrading by oneself.

Attempt of doing so may result in unit malfunction.

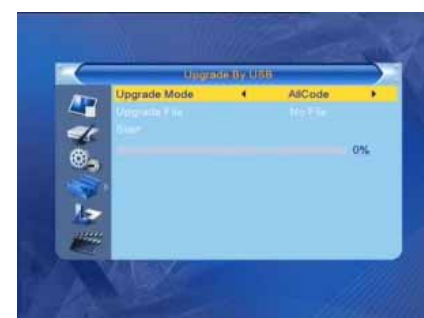

4.5 Upgrade by OTA

This feature is built-in only for distributor's customer support team in the event of restoring the system or repairing. User is not recommended to perform the firmware upgrading by oneself.

Attempt of doing so may result in unit malfunction.

MAIN MENU

4.6 Media Player

A "USB device connected" notice box will appear and stays for 3 seconds when a removable device is plugged-in via USB port. To browse this device content, go to MenuToolsUSB Device and press OK.



Note: only certain media formats are supported, please refer to the end section of the manual.

Function Key

Yellow key: Press to show the Play List

Blue key: Press to select the repeat mode

1. Press number key 0 to add all music to the Play List
2. Press number key 1 to add all images to the Play List.
3. Press INFO key to display the **Setup** window.
4. Press FIND key to display the **Sort** window.



FAV: Press FAV key add the image and MP3 you selected to the Play List.

Play List

Press FAV key to add the image or music to Play List. Press [OK] on Play List button you can see the image or music you selected and in this list you can play and delete them.

Red key: Playing the image in full screen.

Yellow key: Delete the image you selected.

Blue key: Delete all the image in the list.



Music List

Press PR+,PR- key to select the music you want, and press FAV key to added it to the music list, or you can press number key 0 to add all the music to music list.

Press yellow key and select the music button in the window, you can see the music you selected and in this list you can play and delete the music.

Red key: Playing the music.

Yellow key: Delete the music you selected.

Blue key: Delete all the music in the list.



MAIN MENU

Image List

Press PR+,PR- key to select the image you want, and press FAV key to add it to the image list, or you can press number key 1 to add all the images to image list.

Press yellow key and select the image button in the window, you can see the image you selected and in this list you can play and delete them.

Red key: Playing the picture.

Yellow key: Delete the picture you selected.

Blue key: Delete all the picture in the list.

Setup

Show Image Size: Select between full and real.

Slide Show Time: Select among 1-10sec.

Slide Show Repeat: Select between on and off.

Sort


Pressing FIND key, * it will pop up the Sort drop-down List. Options are:

- Default
- Name (A-Z): The ascending order, omitting the \$ character, the number is ahead, followed by the capital letter, at last the lowercase.
- Name (Z-A): The opposite order of the above Name (A-Z).
- Image 1st
- Music 1st



* REC List key on later model RCU


4.7 Remove USB device safely

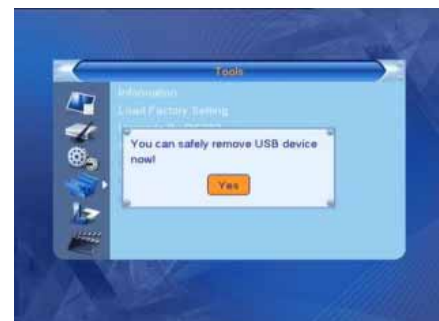1. Press OK key on **Remove USB device safely** it will pop up a dialog: "You can safely remove USB device now!". Press OK on Yes button to remove the USB device.



5. Game

1. Press **OK** key or  key to enter into the game.
2. Press **PR+**, **PR-** keys to move the cursor up or down.
3. Press **EXIT** key or  key to move the focus to the left menu.
4. Select the game that you want to play and press **OK** key to enter into the window.

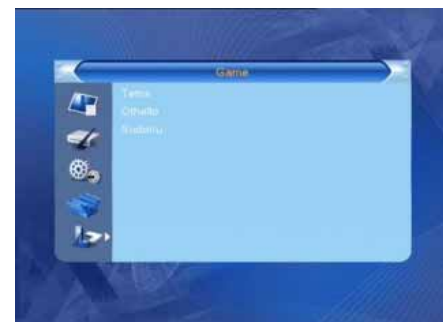

6. REC (PVRReady)

Before you can access the menu page, please have this unit connected to a compatible removable storage device. To achieve the best recording result, users are strongly recommended to use Removable Hard Disk from trusted brands.

Certain USB Drive with lower speed or smaller capacity may not be compatible with this unit.


Minimum requirements on compatible external drives:

- Removable Hard Disk: FAT32/ NTFS format, USB 2.0 port; free capacity 1GB or above.
- USB Flash Drives: total capacity 4GB or above with free capacity 1GB or above
write speed: 3.125 MB or above; read speed: 3.125 MB or above;

During recording, System & Time shift function will take up certain storage space.

6.1. Record Manager

This window will list all recorded programs on your device with details.

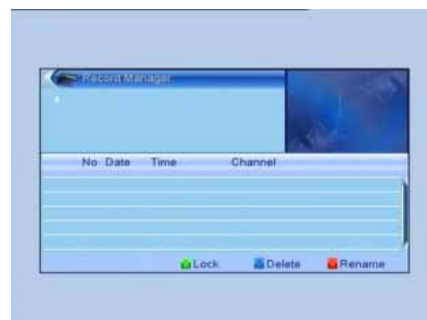


1. Press **PR+**, **PR-** keys to select up or down,
2. Press **green** color key to lock the file you selected, the lock symbol will be marked behind the file. Before you lock the file you must input the correct password, the default password is 0000. Once locked, the file can only be accessed with the correct password.
3. Press blue color key to delete the file you selected.
4. Press red color key to pop up the window for renaming the file you selected, press numeric keys (0-9) to input the character .
5. Press [Play] key to preview. Press [OK] to play the recorder in full screen.
6. Press [PAUSE] key (Next to number key '6') once to pause. Then press repeatedly to play step by step. Press ◀ / ▶ key to slow forward or slow backward . Press ◀◀ / ▶▶ key to fast forward or rewind .

* Remark: to prolong the machine service life, when recording time is shorter than 3 seconds, a warning window will display and the content will not be recorded.

6.2 Record a program

Press RECORD key on RCU to start recording.

The recording information bar will appear, as shown below.

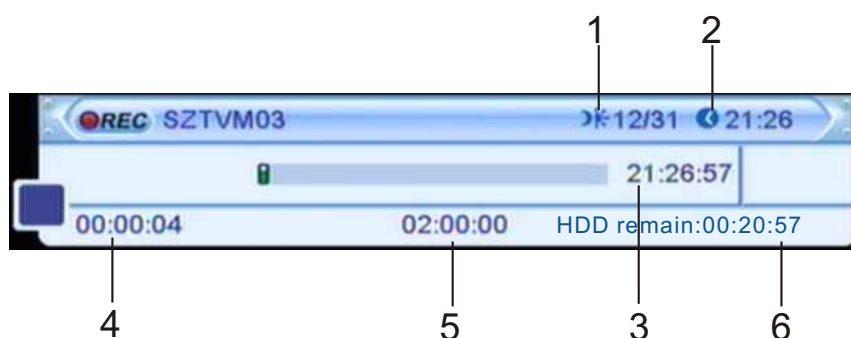

MAIN MENU

1. Current date
2. Current time
3. Current time detailed to seconds
4. Recording time
5. Preset recording duration
6. Remaining time to record

(Remark: based on the current free space of your external drive, the remaining time displayed on the screen is an estimated data only. Actual recording time varies under HD or SD channels.)

To utilise the Preset Recording function, you may press RECORD key again to change the time interval (default 2hours). However, remember to only choose the time interval within the remaining time to record.

Or you can stop recording manually at any time, press STOP and a window with your current recording detail will appear, press again and select YES to stop recording.

You can only watch and record one program at one time, if you switch channels during recording, the record will be automatically stopped.

6.3 Playback Recorded Files

Press FIND key to display the Record Manager menu.

Use UP/DOWN keys to select recorded files from the list in the lower half of the screen.

When highlighted, the detail of the recorded file will be displayed in the upper half of the screen with a preview window located on the right hand side.

Press PLAY to play the file in preview window or press OK to play the file in full screen.

Press STOP to stop playing and return to Record Manager menu.

6.4 DVR HDD Information

Your plugged-in removable device's information will be displayed in window as illustrated.



6.5 Jump

While using the time shift function, you can jump forward/backward to a time point using LEFT/RIGHT keys. Use this option to set the step size of each jump operation, available from 30 secs to 30 mins.



6.6 HDD Format

Storage Partition: Select the Partition on your device to format.

Format: Highlight this button in YELLOW and press OK to format your removable device.

Warning! All data on your removable device will be deleted and cannot be recovered. Please backup your files before formatting the disk.



6.7 PVR Configuration

1. Time shift: to enable or disable the function of 'SHIFT' button on your remote control. The duration of time shift will be based on your free space of external drive.
2. Record Selection: You can change the default storage location of recorded file on your removable device.



7. Hot Key

7.1 Number

Use the numeric keys (0-9) to input the number of the desired channel. If the inputted number is beyond the valid channel number, system will "Invalid number" and press OK key to close this message.

7.2 TV/RADIO

In normal mode, press **TV/RADIO** key to switch between TV mode and Radio mode.

7.3 Up/Down (Channel Change)

Press **PR+**, **PR-** keys to change the channel up or down.

7.4 Left/Right (Volume+/-)

Press \square \square^+ keys to change the volume. Press \square keys to decrease the volume by step 1, while press \square^+ keys to add the volume by step 1.

7.5 Mute

Press \boxtimes key to close the volume. You can press \boxtimes key once again to restore the volume, or press \square \square^+ keys to open the volume.

7.6 Pause

During the viewing, you can press **PAUSE** key to stop the picture while the volume continues. You can play the picture by pressing **PAUSE** key once again.

7.7 Teletext

Press **TXT** keys to open the teletext on the screen. If there is no teletext, system will inform "No Data!". Press **EXIT** key to exit.

Teletext availability is subject to channel broadcasting in each region.

7.8 Subtitle

Press \square keys to show the subtitle window, use UP/DOWN keys to select and press OK to confirm.




MAIN MENU

7.9 OK

1. During the viewing or listening, press **OK** key to pop up the TV program list or the Radio program list.
2. Press **PR+**, **PR-** keys to select the channel up or down, and then press **OK** key to play this channel in full-screen.
4. Press **MENU** or **EXIT** key to close this window.



7.10 Audio

1. Press  key to enter into the Audio window.
2. Press   keys to select between Left, Right, Mono and Stereo.
3. Changing the audio mode is only connected with the current channel, not all the channels.
4. Press **MENU** or **EXIT** key to close this window.





7.11 Recall

Press PR key to switch the current channel to the previous channel.

7.12 Info

1. Press INFO key to enter into the information window.
2. Double press INFO key to check signal quality.

7.13 FAV

1. Press **FAV** key to pop up the favourite group window.
2. Press   keys to select the favorite group. Press **PR+**, **PR-** keys to select the channel up or down. Press **OK** key at the selected channel to view it in full-screen. Press **MENU** or **EXIT** key to exit.
3. If there is no favorite channel, system will inform "No FAV Channel!" when you press **FAV** key.



7.14 EPG

Press **EPG** key to enter into the EPG window.

1. Press **PR+**, **PR-**, \triangleleft \triangleleft^+ keys to select up or down, left or right.

2. Press **red** colour key to pop up the Time Bar window.

Press **PR+**, **PR-** keys to select up or down, while press \triangleleft \triangleleft^+ keys to select left or right in the time bar.

\leftarrow : Press **OK** key at this button to return to the EPG window.

\triangleup : Press **OK** key at this button to move the cursor to the current time line.

$\blacktriangleleft\blacktriangleright$: Press **OK** key to push the time forward or backward by half an hour.

$\blacktriangleleft\blacktriangleright\blacktriangleleft\blacktriangleright$: Press **OK** key to push the time forward or backward by 2 hours.

$\blacktriangleleft\blacktriangleright\blacktriangleleft\blacktriangleright\blacktriangleleft\blacktriangleright$: Press **OK** key to push the time forward or backward by a day. From the current day, you can switch among the future 7 days in circle.

3. Detail Information: In the **EPG** window, press **PR+**, **PR-**, \triangleleft \triangleleft^+ keys to select the channel and program, and press **OK** key to know the detail information of the current program.

4. Press **green** colour key to enter into the **Timer** window. You can add the current program to the Timer. If 8 timers is already, system will inform "Timer is full!".



SPECIFICATION

1.Main Chip

CPU frequency	266MHz
Flash Memory	1PC 32Mbit/4MByte
SDRAM Memory	2PC 32X16Mbit/64Mbyte DDRs

2.DVBT Channel Decoder

DVBT Demod standard	DVB-T (ETS 300 744)
DVBT Demodulation	OFDM
Bandwidth	7、8MHz
FFT SIZE	2K、8K
Code Rate	1/2、2/3、3/4、5/6、7/8
Guard Intervals	1/4、1/8、1/16、1/32

3.TS Demux

Demultiplexer	MPEG2 ISO/IEC 13818-1
Input Bit Rate	Max 100Mbit/s

4.Video Decode

Video Decode	MPEG2 ISO/IEC 13818-2 MP@ML, H.264(MPEG4 part 10) main and high profile level 4.1/MPEG-2 MP@HL
Aspect Ratio	4:3、16:9

5.Audio Decode

Audio Decode	MPEG-1 layerI/II, MPEG-2 layer II, MPEG-2 AAC, MPEG-4 AAC LC 2ch/5.1ch
Sound Mode	LEFT/RIGHT/STEREO/MONO
Sampling Frequency	32KHz、44.1KHz、48KHz

6.AV Output

Video Bandwidth	SD:5.0MHz(-3dB),HD:30MHz(-3dB)
Video Impedance	75Ω
Video Voltage Level	1.0 Vp-p
Audio Freq. Range	20 ~ 20KHz
Audio Impedance	600Ω
Audio Voltage Level	2V rms(5.6Vp-p)

7. PVR Ready

Support file format	OGG/.WMA/.MP3/.MPEG1/.BMP/.JPG
---------------------	--------------------------------

TROUBLE SHOOTING

Problem	Possible causes	What to do
The display on the front panel does not light up.	Power line is not connected.	Check that the power line is plugged into the power socket.
No sound or picture, but the front panel shows red light.	The receiver is in standby mode.	Press the standby button.
No sound or picture.	No signal or weak signal.	Check signal cable connections, antenna and other equipment connected between the antenna and the receiver.
	Signal is too strong.	Connect a signal attenuator to the antenna input.
Bad picture / blocking error.	Antenna noise factor too high.	Change to an antenna with lower noise factor.
	The antenna is faulty.	Change the antenna.
The picture is not displayed on the screen, when switching on.	The system is connected by RF leads.	Check the UHF channel fixed in your system and tune the UHF channel properly.
There is interference on your terrestrial program or video signal.	The system is connected by RF leads and the output program of the receiver interferes with an existing terrestrial programs or Video signal.	Change the receiver output program to a more suitable program, or connect the system by SCART leads.
The RCU is not working.	Battery exhausted.	Change the batteries.
	RCU is incorrectly aimed.	Aim RCU at the receiver, or check that nothing blocks the front panel.
The recording was automatically stopped.	The memory of your external drive is not sufficient for recording.	Safely remove the external drive and replace it with a new compatible drive.
The unit can not detect the plug-in external drive.	The external drive is not compatible with this unit; please refer to Minimum requirements on compatible external drives on Section 6 of this manual.	Choose a compatible external drive.

● **Note:** if you have tried all of the actions suggested above, yet problem still persists, please contact your local dealer or a customer service adviser.

Copyright

This manual contains information by copyright law.

No part of this document may be used or reproduce in any form or by means, or stored in a database/retrieval system without prior written permission from us.

The information of this manual is based on the current version of the product.

We reserve the right to alter the content without prior notice.

All brand names in this manual are the property of their respective owners.

Need some help?
Call our toll free
Customer Helpline today!



Or visit our website
www.olinstyle.com



Westwell Australia Pty Ltd

Westwell and its stylised logo are registered with the Australian IP office.

OLIN is a registered trademark of Westwell Australia Pty Ltd.

All rights reserved.

All promotional materials offered for reference only.

Actual may vary.

DVB is a registered trademark of the DVB Project

HDMI, the HDMI Logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.